



Get Started

The logo for 'tabs' is displayed in a white, lowercase, sans-serif font on a solid teal background. A small trademark symbol (TM) is located at the top right of the letter 's'.

# Set Up Your Device



## 1. Download the App

Search for Tabs on the Apple App Store or Google Play Store.



## 2. Sign Up

Create a Tabs account, or log in if you already have one.



## 3. Add Your Device

Follow the in-app instructions, or tap the + button in the Control tab.



## 4. Mount Your Device

Mount your device on the wall, following the instructions on page 4.



# Motion Sensor

Know that your home is secure. Use the wide-angle, wall-mounted sensor to detect and alert you to activity around your home when you're away or asleep.



## Custom Alerts

Customized app alerts will let you know when important events occur.



## Alert Forwarding

Easily forward your alerts to friends and family while you're away.



## Home Security


Be alerted instantly if an intruder gains entry while you're away.




## Long-Lasting Batteries

Don't worry about replacing the batteries for a year or more.

## What's in the Box

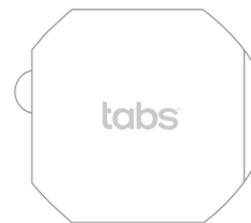

Motion Sensor

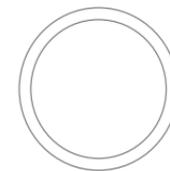

Wall Mount

## Requirements



Tabs Hub or Mini Hub




Internet Connection



iOS 9+ or Android 4.1+

## Installing Your Motion Sensor


1. Determine the best location for your sensor. See the next page for tips.
2. Fasten the screw into the wall.
3. Hang the magnetic wall mount on the screw, following the diagram below.
4. Attach the motion sensor to the mount. It will snap on magnetically.
5. Position the angle of your sensor.

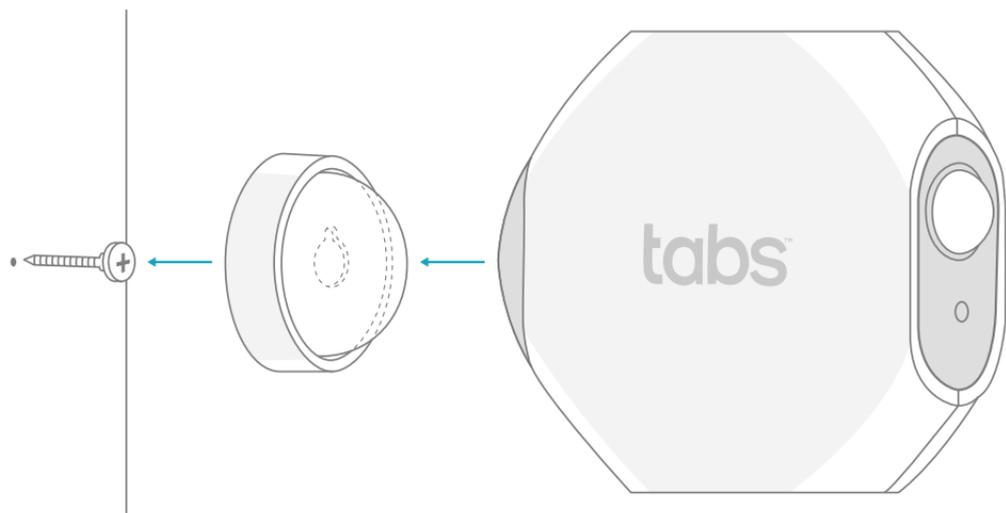

## Positioning Tips

When positioning your motion sensor, here are several tips to keep in mind:

- Sensors have viewing angles of 170° horizontally and 97° vertically. They can detect motion from up to 20 feet away (7 meters).
- The sensor works by monitoring changes in infrared energy. Avoid pointing sensors directly at lights or mounting your sensor next to vents, radiators, or other heat sources.
- Try to position your sensor so that an intruder would have to walk past it when entering rather than walking directly toward it.
- If you have large pets, you may have to experiment in order to avoid false alarms. Point sensors away from stairs and other high places where pets may go.

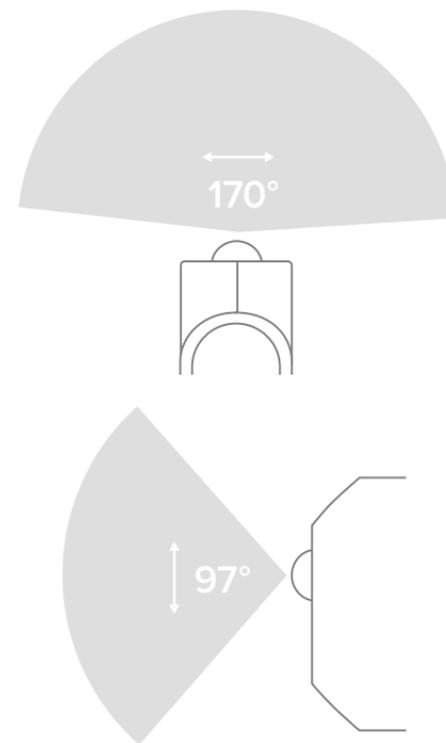


# The Tabs App



## About the App

Manage all of your devices, create custom alerts and more with our easy-to-use app.


-  **Menu**  
View alerts, update settings, get product and app support, and set your Quick Mode.
-  **Locate**  
See the current location of your Tabs Object or Wristband Locator.
-  **Control**  
Manage and view history, settings, and alerts for all of your devices.
-  **Wi-Fi**  
Set Wi-Fi Parental Controls including schedules, time limits, and restricted content. In-app purchase required.

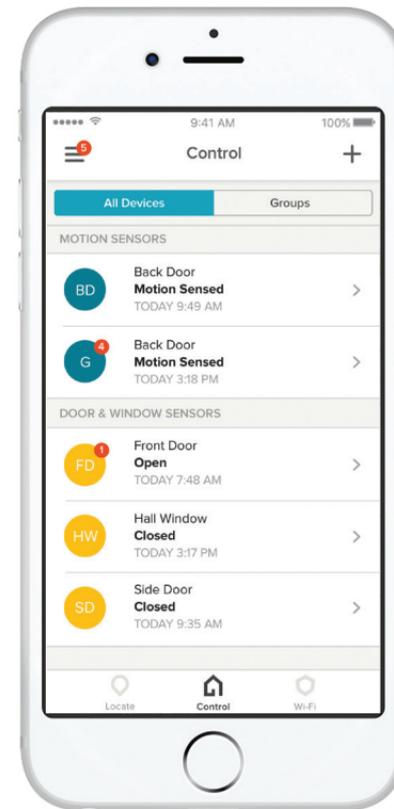

**Having trouble?** Get technical support at [tabs.io/support](https://tabs.io/support).

## Setting Custom Alerts


You can set up custom alerts for your Tabs devices. From the Control tab, select the device you would like to create an alert for, and then follow the steps below:

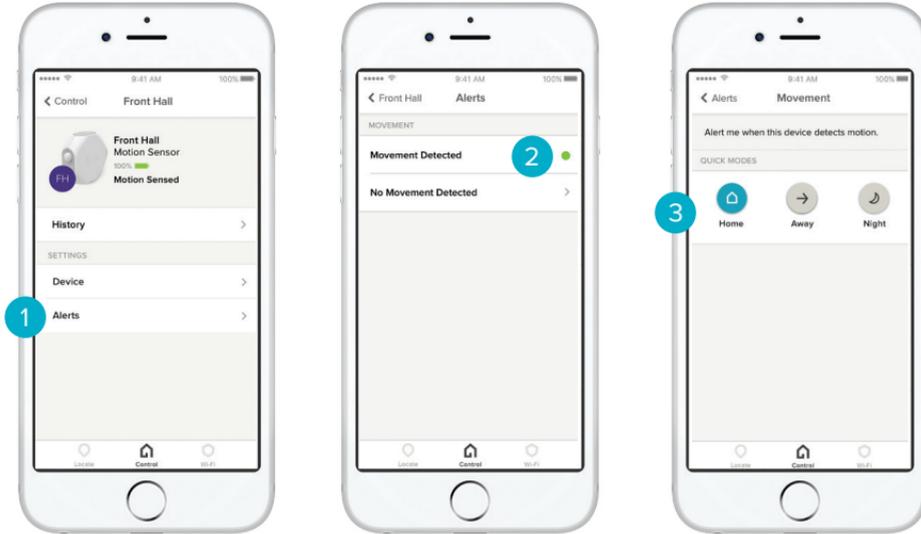

1. Select **Alerts** inside the device detail screen.
2. You will see a list of all available alerts. Active alerts will have a green dot. Choose the alert which you would like to set or edit.
3. All alerts must be activated in at least one Quick Mode (see next page).

## Quick Modes

Quick modes ensure that you only get the alerts you really need, when you want them. For example, you might not want to receive alerts from your door sensor when you are home. Modes are set per alert during alert creation. You can change your current mode from the side menu ☰.

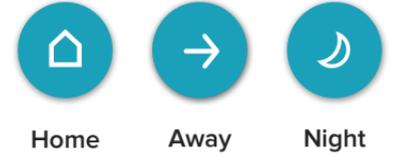

## Friends & Family Mode

Switching to Away mode displays a toggle for Friends & Family. This feature forwards your alerts to a trusted neighbor or family member. Members can be added by going to Alerts under Settings in the side menu ☰ and tapping on Friends & Family Alerts.

## Important Product & Safety Instructions

For the most current and more detailed information about Tabs features and settings as well as safety instructions, please download the user manual for the products online at [tabs.io/support](https://tabs.io/support) before use of any Tabs products or services.

 Certain sensors contain magnets. **Keep away from ALL Children!** Do not put in nose or mouth. Swallowed magnets can stick to intestines causing serious injury or death. Seek immediate medical attention if magnets are swallowed.

 These products are not toys and contain small parts that can be dangerous to children under 3 years old. Do not allow children or pets to play with products.

 Observe proper precautions when handling batteries. Batteries may leak or explode if improperly handled.

 **Observe the following precautions to avoid a sensor explosion or fire:**

- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate or paint the sensors, Hub or other hardware.
- Do not insert foreign objects into any opening on the sensors or Hub, such as the USB port.
- Do not use the hardware if it has been damaged—for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery (whether integrated or removable) can cause an explosion or fire.
- Do not dry the sensors or battery with an external heat source such as a microwave oven or hair dryer.

## Warnings

- Do not place naked flame sources, such as lighted candles, on or near the equipment.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not dismantle, open or shred battery pack or cells.
- Do not expose batteries to heat or fire. Avoid storage in direct sunlight.
- Do not short-circuit the battery. Do not store batteries in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- Do not remove a battery from its original packaging until required for use.
- Do not subject batteries to mechanical shock.
- In the event of a battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use any charger other than that specifically provided for use with the equipment.
- Observe the plus (+) and minus (-) marks on the battery and equipment and ensure correct use.
- Do not use any which is not designed for use with the product.
- Do not mix cells of different manufacture, capacity, size or type within a device.
- Keep batteries out of the reach of children.
- Seek medical advice immediately if a battery has been swallowed.
- Always purchase the correct battery for the equipment.
- Keep batteries clean and dry.
- Wipe the battery terminals with a clean dry cloth if they become dirty.
- Rechargeable batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- Do not leave a rechargeable battery on prolonged charge when not in use.

## Notices

-  Avoid exposing your sensors or batteries to very cold or very hot temperatures. Low or high temperature conditions may temporarily shorten the battery life or cause the sensors to temporarily stop working.
-  Take care in setting up the Hub Gateway and other hardware. Follow all installation instructions in the User Guide. Failure to do so may result in injury.
-  Do not install hardware equipment while standing in water or with wet hands. Failure to do so can result in electric shock or death. Use caution when setting up all electronic equipment.
-  When charging the sensors, do not handle the sensors with wet hands. Failure to observe this precaution could result in electric shock.
-  Do not check the GPS via the Tabs application while driving or in other situations where distractions could be hazardous. Always be aware of your surroundings when using the Wristband Locator or other sensors.

-  The Wristband Locator Sensor may cause skin irritation. Prolonged contact may contribute to skin irritation or allergies in some users. To reduce irritation, follow four simple wear and care tips: (1) Keep it clean; (2) keep it dry; (3) don't wear it too tight, and (4) give your wrist a rest by removing the band for an hour after extended wear.

-  **PROP 65 WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm



- Cleaning Tabs Products: Use a clean dry cloth or wipe to clean Tabs products. Do not use detergent or abrasive materials to clean the Tabs products, as this may damage the sensors.

## Warranty

**Limited Warranty:** To the extent permitted by the law in the country in which purchase Tabs products, TrackNet warrants that for a period of one (1) year from original date of purchase, the product will be free from defects in materials and workmanship under normal use. In the event of a defect, contact TrackNet Customer Support ([tabs.io](https://tabs.io)/support) for assistance. TrackNet's sole obligation under this warranty will be, at its option, to repair or replace the product. This warranty does not apply to products damaged by misuse, accident, or normal wear and tear. Damage resulting from use with non-Tracknet's batteries, power cables, or other battery charging/recharging accessories or devices is also not covered by this or any warranty. **NO OTHER WARRANTY OF ANY KIND (EITHER EXPRESS OR IMPLIED) IS PROVIDED AND ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A SPECIFIC OR GENERAL PURPOSE AND THOSE ARISING BY STATUTE OR BY LAW, OR FROM A CAUSE OF DEALING OR USAGE OF TRADE.**

**Limitation of Liability:** IN NO EVENT, REGARDLESS OF CAUSE, SHALL TRACKNET BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER ARISING UNDER BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE, AND WHETHER RELATED TO THE USE OF THE TABS PRODUCTS OR SERVICES OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.



Hereby, TrackNet declares that the radio equipment for Tabs products is in compliance with Directive 2014/53/EU.



This device complies with Part 15 of the FCC Rules and RSS Standards of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For the full FCC/IC Compliance Statements and EU declaration of conformity, visit [www.tabs.io/legal](https://www.tabs.io/legal)



This symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Manufactured by Trackio GmbH  
Engelhölzlistrasse 7A, 8645 Rapperswil-Jona SG, Switzerland

© 2017 TrackNet Inc, USA and Trackio GmbH, Switzerland. All rights reserved

TBUG100-MS1 Rev. A