

Electronics

RFI Power Line Filters for UL2601 Healthcare Equipment

H Series



UL Recognized CSA Certified VDE Approved*

H Series

The H series filters were developed specifically for health care applications. These products are suitable for uses in both patient care equipment and non-patient care equipment. Their extremely low leakage current allows compliance with UL2601 and CSA 22.2 health care specifications.


See Appendix C for more information on UL544 health care applications.

The H series features products with a variety of current ratings and case styles. Model 10EH4C additionally incorporates a separate ground circuit inductor to isolate equipment chassis from power line ground at RF frequencies.

For more information on UL2601, see Appendix C.

Note: When using the models with an IEC connector (e.g. 6EH4), remember that the leakage current of the companion line cord, GA400, is more significant than that of the filter – which may disqualify this line cord from use in patient care applications.

Electrical Schematic



Resistor location for reference only.



Specifications

Hipot rating (one minute):	
@ 250 VAC 50 Hz:	5μΑ
@ 120 VAC 60 Hz:	2μΑ

line-to-ground 2250 VDC line-to-line 1450 VDC

Operating frequency: 50/60 Hz

Rated voltage (max.): 250 VAC

Minimum insertion loss in dB:

Line-to-ground in 50 ohm circuit

Current	Frequency-MHz					
Rating	.15	.5	1	5	10	30
3A	18	27	30	30	27	18
6A	9	16	20	26	23	18
10A	7	13	15	17	16	14
15A	5	9	11	12	11	9


Line Cord

Line Cord No. GA400:

SVT type $7^{1/2}$ foot, 3-conductor line cord to mate with all models except EH1. 50 micro amps maximum leakage @120 VAC, 60 Hz.

Case Style

EH3

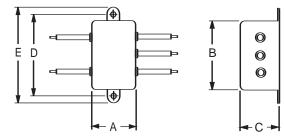

Typical dimensions:

Wire leads: 4.0 [101.6] Min. 18 AWG Mounting holes: .132 [3.35] Dia. (2)

USA Cust. Svc.: 1-800-468-2023 CORCOM Prods: 1-847-680-7400 Germany: 49-89-6089-0 www.corcom.com www.tycoelectronics.com

^{*15}EH4 - VDE rated at 10 amps, 250 VAC


RFI Power Line Filters

Electronics

RFI Power Line Filters for UL2601 Healthcare Equipment (Continued)


H Series

Case Styles EH1

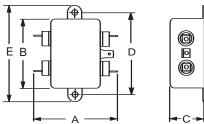



Typical dimensions: Terminals: .250 [*6.35*] (5) Holes: .07 [*1.8*] Dia.(4) Slot: .07 x .16 [*1.8* x 4.1] Mounting holes: .188 [*4.78*] Dia. (2)

EH4 & EH4C




EH9






rypical differisions: Terminals: 250 [*6.35*] (3) Holes: .07 [*1.8*] Dia.(2) Slot: .07 x .16 [*1.8 x 4.1*] Mounting holes: .132 [*3.35*] Dia. (2)

EH5

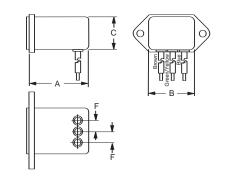

EH8

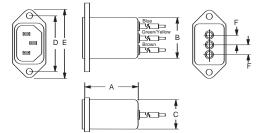

Typical dimensions: Wire leads: 4.0 [*101.6*] Min. 18 AWG Mounting holes: .132 [*3.35*] Dia. (2)

Case Dimensions


Part No.	A (max)	B (max)	C (max)	D ± .015 ± .38	E (max)	F (ref)
3EH1 6EH1 10EH1	2.25 57.2	1.82 46.1	0.66 16.7	2.125 53.98	2.53 64.2	_
3EH3 6EH3 10EH3	.96 24.40	1.82 46.1	0.66 16.7	2.125 53.98	2.53 64.2	_
6EH4	2.20 55.9	1.19 30.2	0.81 20.6	1.575 40.01	1.98 50.3	_
6EH5	1.55 39.4	1.19 30.2	0.85 21.6	1.575 40.01	1.98 <i>50.3</i>	.295 7.5
6EH8	1.56 39.7	1.19 30.2	0.81 20.6	1.575 40.01	1.98 <i>50.3</i>	.295 7.5
6EH9	1.55 39.4	1.19 30.2	0.85 21.6	1.575 40.01	1.98 50.3	_
10EH4	2.62 66.5	1.19 30.2	0.81 20.6	1.575 40.01	1.98 50.3	_
10EH4C	2.62 66.5	1.19 30.2	0.81 20.6	1.575 40.01	1.98 <i>50.3</i>	_
15EH4	2.62 66.5	1.19 30.2	0.81 20.6	1.575 40.01	1.98 <i>50.3</i>	_

Part Numbers

3EH1	6EH8
3EH3	6EH9
6EH1	10EH1
6EH3	10EH3
6EH4	10EH4
6EH5	10EH4C
	15EH4*
Line Cord No.	GA400
Insulating Boot No. (EH4, E	EH4C) FA601
*!!! 004 454 \/DE 404	

*UL, CSA - 15A; VDE - 10A

Recommended Panel Cutouts

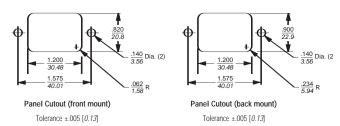

Note 1: EH4, EH4C and EH8 allow front or back mounting. Note 2: EH5 and EH9 allow back mounting only.